




**BASURI**<sup>®</sup>  
*Automotive*  
INDIA

:: AIR HORN USER MANUAL ::



## SPECIFICATIONS :-

<b>Rated Voltage (v)</b>	: 12v / 24v
<b>Frequency (hz)</b>	: L-200 / H-450
<b>Operating Pressure (Bar)</b>	: 6 - 8.5 kg
<b>Decible</b>	: 120 dB
<b>Dimensions Of Funnel (mm)</b>	: 105 (Ø) / 300 (L)
<b>Electrical Connection</b>	: Wire
<b>Colour</b>	: Powder Coted

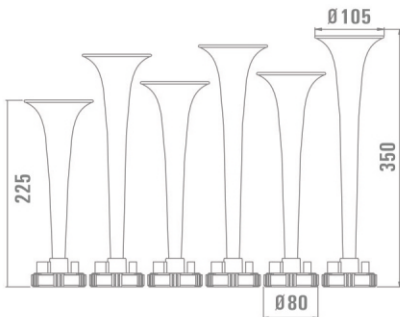

## Safety Warnings and Precautions

**WARNING:** When using tool, basic safety precautions should always be followed to reduce the risk of personal injury and damage to equipment.

**Read all instructions before using this tool!**

- 1. Keep work area clean. Cluttered areas invite injuries.**
- 2. Observe work area conditions.** Do not use machines or power tools in damp or wet locations. Don't expose to rain. Keep work area well lighted. Do not use electrically powered tools in the presence of flammable gases or liquids.
- 3. Keep children away.** Children must never be allowed in the work area. Do not let them handle machines, tools, or extension cords.
- 4. Use the right product for the job.** There are certain applications for which this product was designed. It will do the job better and more safely at the rate for which it was intended. Do not modify this product and do not use for a purpose for which it was not intended.
- 5. Dress properly.** Do not wear loose clothing or jewelry as they can be caught in moving parts. Protective, electrically non-conductive clothes and non-skid footwear are recommended when working. Wear restrictive hair covering to contain long hair.
- 6. Do not overreach.** Keep proper footing and balance at all times. Do not reach over or across running machines.

**7. Check for damaged parts.** Before using this product, any part that appears damaged should be carefully checked to determine that it will operate properly and perform its intended function. Check for any other condition that may affect proper operation. Any part that is damaged should be properly repaired or replaced by a qualified technician. Do not use the product if the switch does not turn On and Off properly.

**8. Replacement parts and accessories.** When servicing, use only identical replacement parts. Use of any other parts will void the warranty. Only use accessories intended for use with this product. Approved accessories are available from **BASURI** Authorized Seller.

**Note: Performance of this tool may vary depending on variations in battery power.**

## **PRODUCT SPECIFIC SAFETY PRECAUTIONS**

1. During installation, remove ignition keys from the vehicle and set the parking brake.
2. Only connect the positive (+) hot lead to a fused terminal or circuit.
3. Avoid short circuits or burns. Do not wear rings, watches, or other metallic objects around your hands and arms.

**Warning:** The warnings, cautions, and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product, but must be supplied by the operator.

**Warning:-** People with pacemakers should consult their physician(s) before using this product. Electromagnetic fields in close proximity to a heart pacemaker could cause interference to or failure of the pacemaker.

## **UNPACKING**

**When unpacking, check to make sure the Horn parts are included. if any parts are missing or broken, please contact BASURI Distributor.**



## :: Installation ::

**Caution:** If you are not familiar with working around vehicle engine compartments, the installation should be completed by a qualified technician. Before attempting installation of the Air Horns, remove the keys from the vehicle ignition, set the emergency brake, and place wheel chocks.


1. Lift the vehicle hood and find a suitable location to mount the Horns and Compressor.

This location must shelter the Horns from incoming rain, road water, and mud from under the vehicle. It also must be away from all moving engine parts and heat.

2. Using a Bolt and Nut mount the to the vehicle chassis in a Horizontal position (air outlets facing front)

A hole may need to be drilled in the chassis frame to accomplish this. Always be careful that no electrical wires or cables are in the drilling path. Securely tighten Nut.

3. Mount the Horns near the Compressor so that they are pointing forward and slightly downward for maximum efficiency. The head of the Bolt slides into the Horn mounting bracket. Securely tighten Nut.

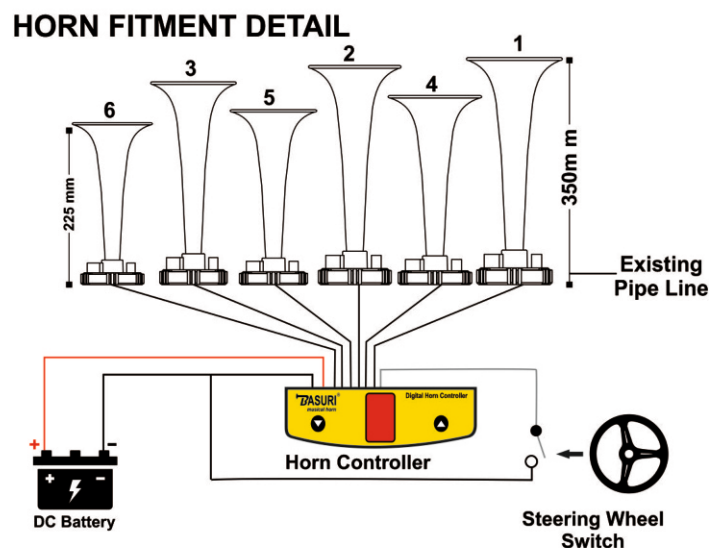

4. Connect the air supply to the Horns using the rubber Tubing and the Y-Connector. Cut the rubber tubing to the desired length. Do not fold or kink tubing.

6. Make the Air connections to the Compressor and the Electric Relay as shown on the wiring diagram below.

Always use vehicle terminal type connectors (not supplied) on all connections. Never wrap wires around terminals as they could fall off. Connect terminal on the Electric Relay to a 10A fused circuit.

Note: Some vehicles may employ a positive ground system. Pay attention to polarity. If the Compressor turns on and the Horns do not sound, reverse the Compressor connections (+ / -).

7. The Air Horns will now sound when the vehicle horn is pushed

### PLEASE READ THE FOLLOWING CAREFULLY

THE MANUFACTURER AND/OR DISTRIBUTOR HAS PROVIDED THE PARTS DIAGRAM IN THIS MANUAL AS A REFERENCE TOOL ONLY. NEITHER THE MANUFACTURER NOR DISTRIBUTOR MAKES ANY REPRESENTATION OR WARRANTY OF ANY KIND TO THE BUYER THAT HE OR SHE IS QUALIFIED TO MAKE ANY REPAIRS TO THE PRODUCT OR THAT HE OR SHE IS QUALIFIED TO REPLACE ANY PARTS OF THE PRODUCT. IN FACT, THE MANUFACTURER AND/OR DISTRIBUTOR EXPRESSLY STATES THAT ALL REPAIRS AND PARTS REPLACEMENTS SHOULD BE UNDERTAKEN BY CERTIFIED AND LICENSED TECHNICIANS AND NOT BY THE BUYER. THE BUYER ASSUMES ALL RISK AND LIABILITY ARISING OUT OF HIS OR HER REPAIRS TO THE ORIGINAL PRODUCT OR REPLACEMENT PARTS THERETO. OR ARISING OUT OF HIS OR HER INSTALLATION OF REPLACEMENT PARTS THERETO.

